

CW-30 SERIES THERMOSTAT


MODEL DANFOSS RET B – LS FOR EUROPEAN MARKET

Operating Instructions




- / **Viewing Room Temperature and Unit Operation Status:** The LCD will display the actual room temperature during normal operation. If the display is blank, replace the batteries. Further, a snowflake symbol will appear on the display when there is a demand for cooling (unit should operate when this symbol is illuminated).
- / **Setting the temperature:** Turn setting dial. The display will flash indicating the setpoint temperature selected. After a short period, the display stops flashing and shows actual room temperature.
- / **Low Battery Indication and Changing Batteries:** A battery symbol will flash in the display when batteries require replacement. Batteries should be replaced within 15 days, after which the thermostat will turn off the unit. When this happens, “OF” will be displayed. To avoid having this happen, replace the batteries every 18 months. Thermostat takes 2xAA/MN1500 Alkaline Batteries. Ensure that unit is unplugged or that electric circuit to unit is turned off, prior to replacing batteries.
- / **AUTO/OFF Switch:** When the switch is set in the “O” position, thermostat will turn unit off and “OF” is displayed.


STEP 1: Remove the thermostat from the wall bracket

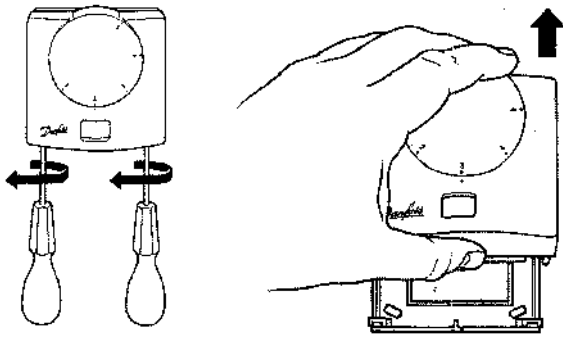


STEP 2: Wiring. Connect black wire to terminal 2 white wire to terminal 3

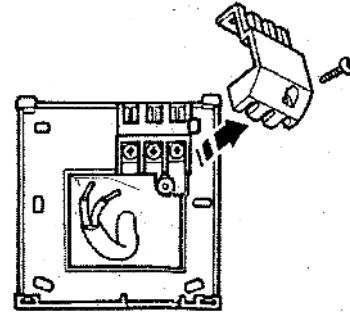


STEP 3: Remove battery shield to energize thermostat

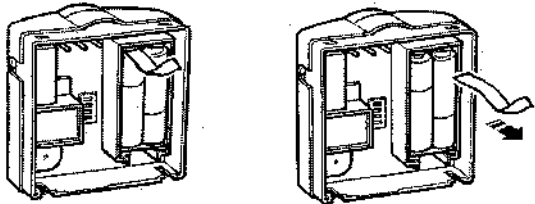

STEP 4: Replace thermostat onto wall bracket

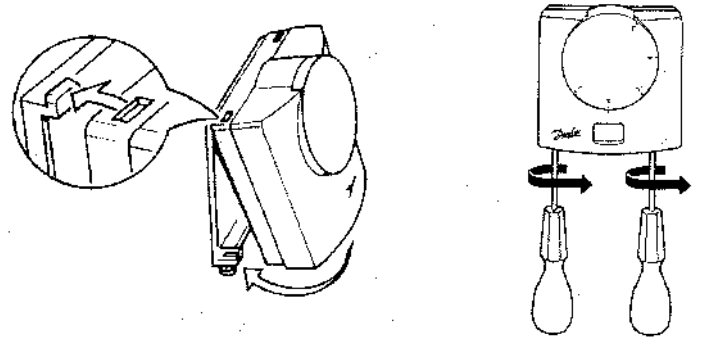

CAUTION: Dip switches to be left as set by the factory

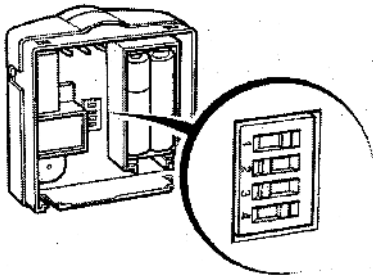

REMEMBER: Replace batteries as specified in user instructions

